



 
Friends



41118








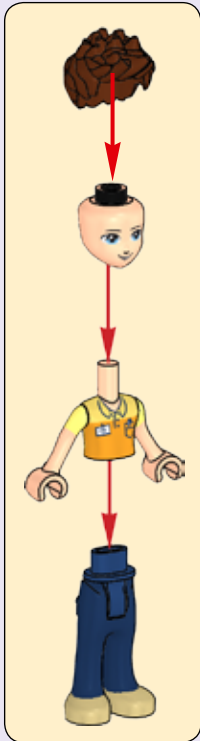





1

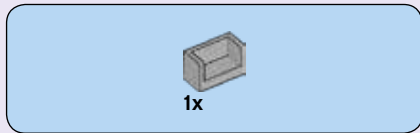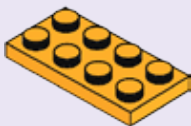  

2

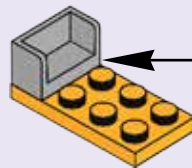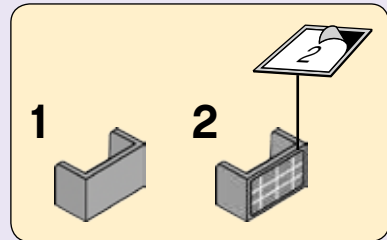  



3

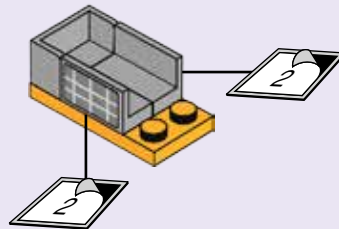 




2x

  4

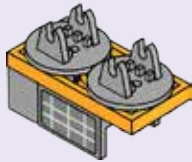



2x

 5

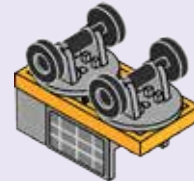


1x

  6

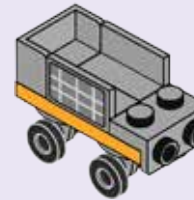





7



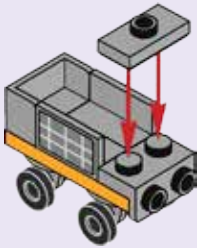 


8

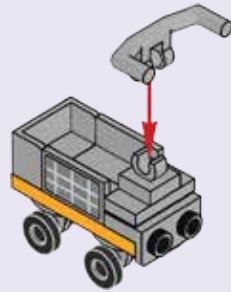 

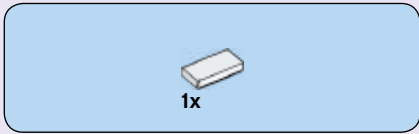 


9

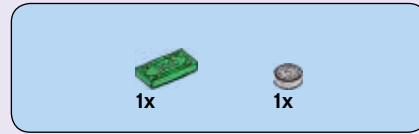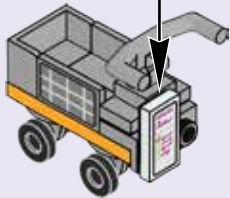  
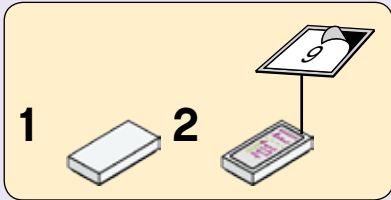 


10





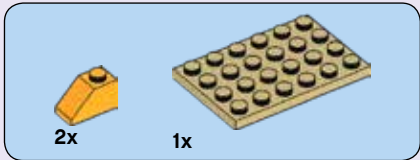 


1

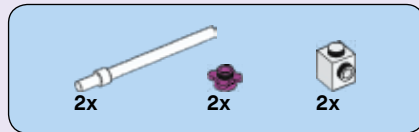 
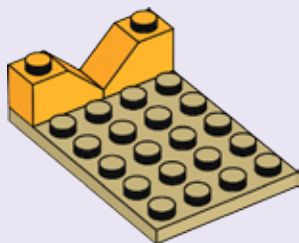 


2

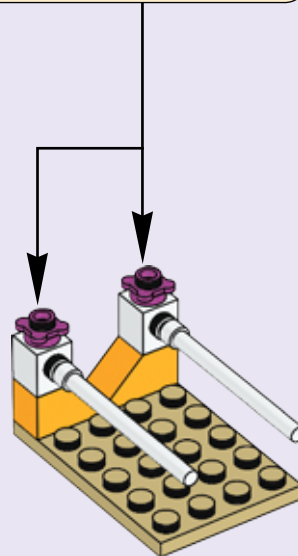 
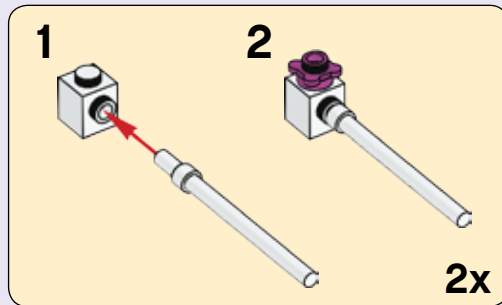 


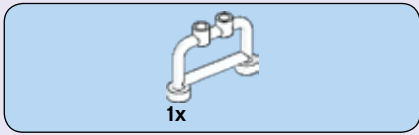 



3

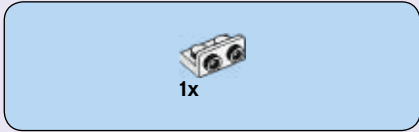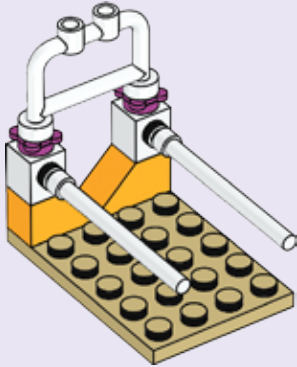  


4

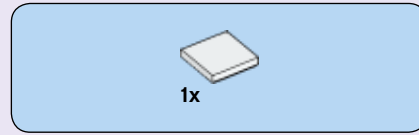 
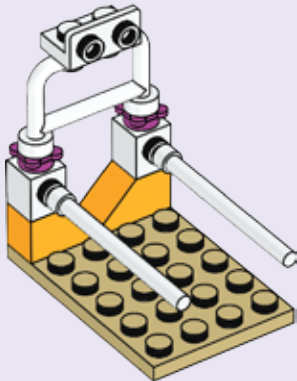 


5

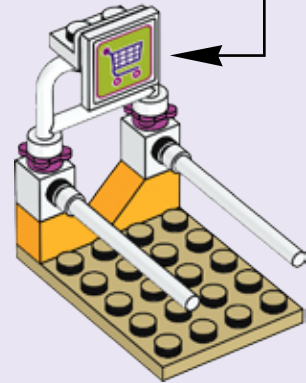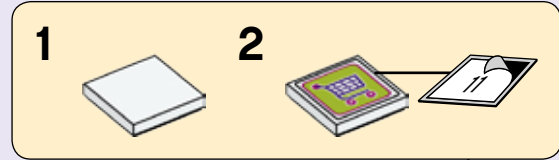  


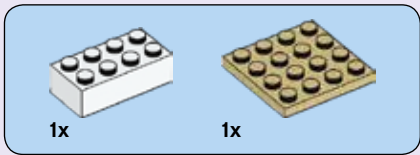 


1

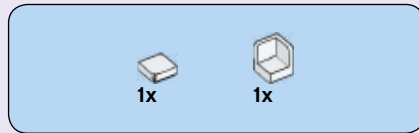 
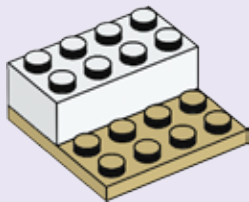 


2

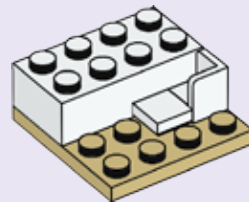 


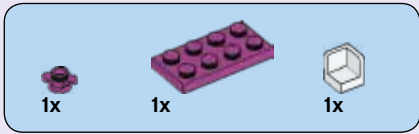 


3


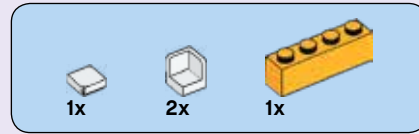 
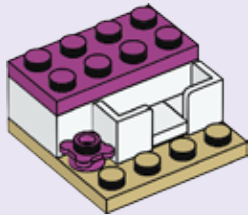 


4

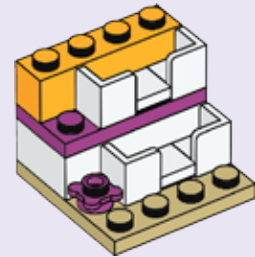 

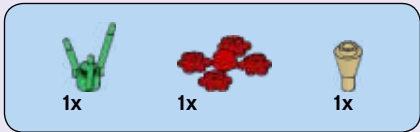 

5

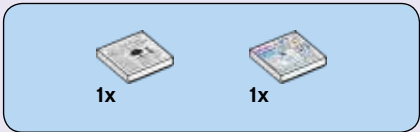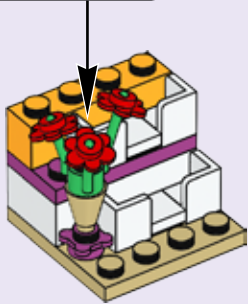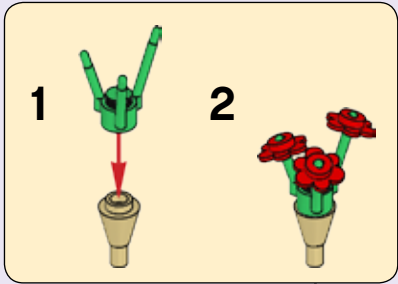   

6



 


 
1x




1x



1

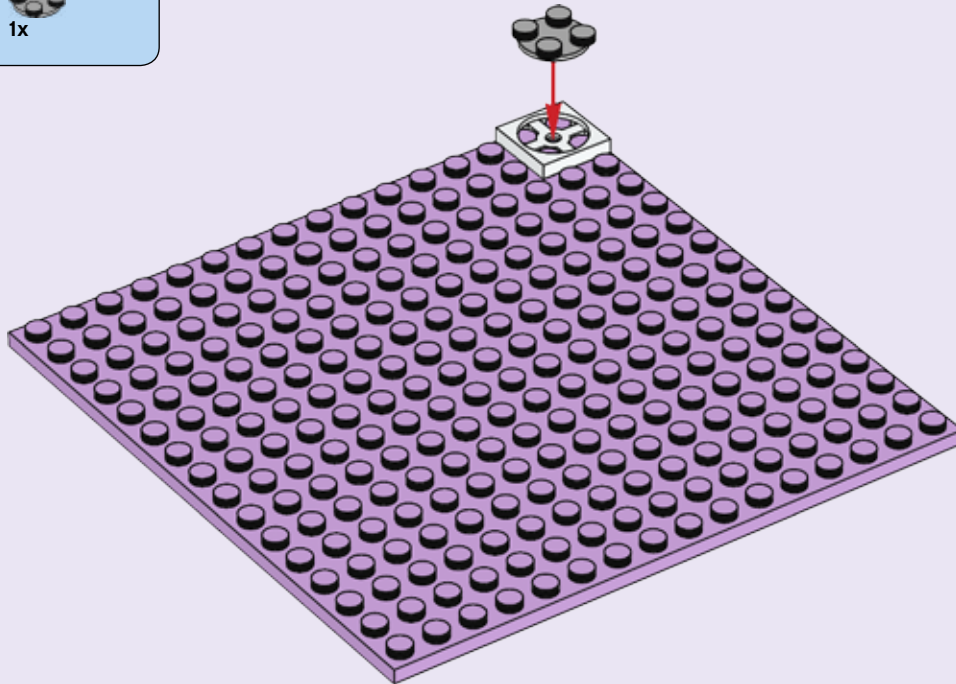

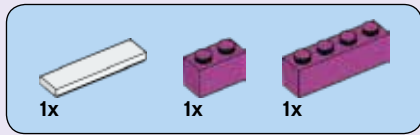



2

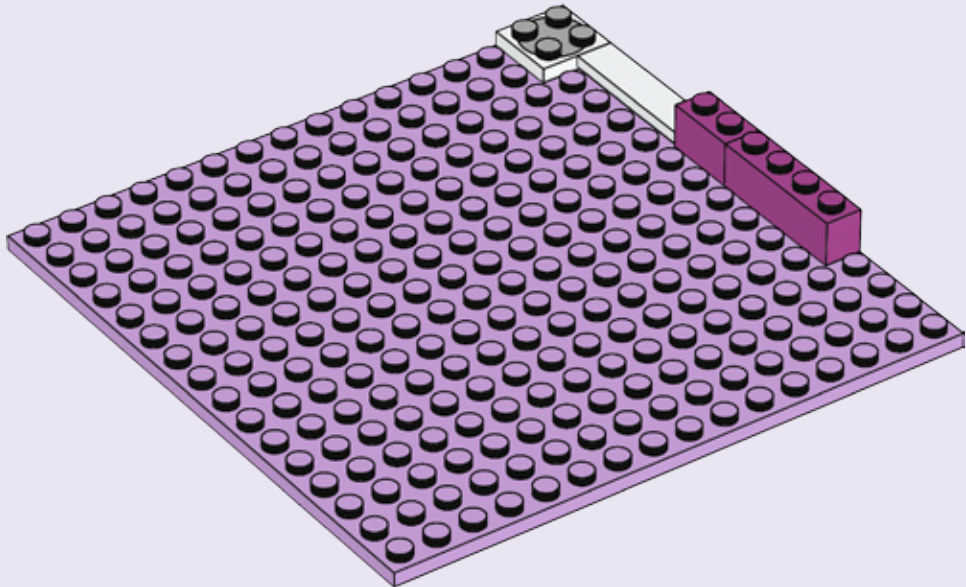 

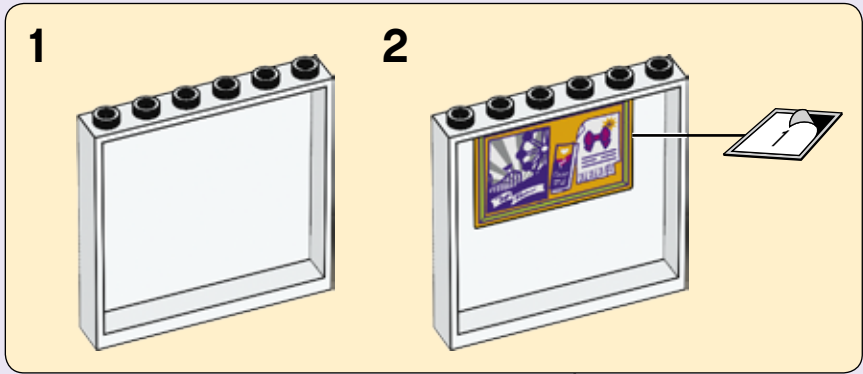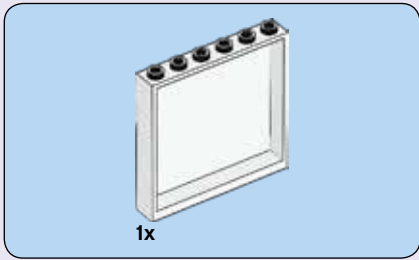  



3

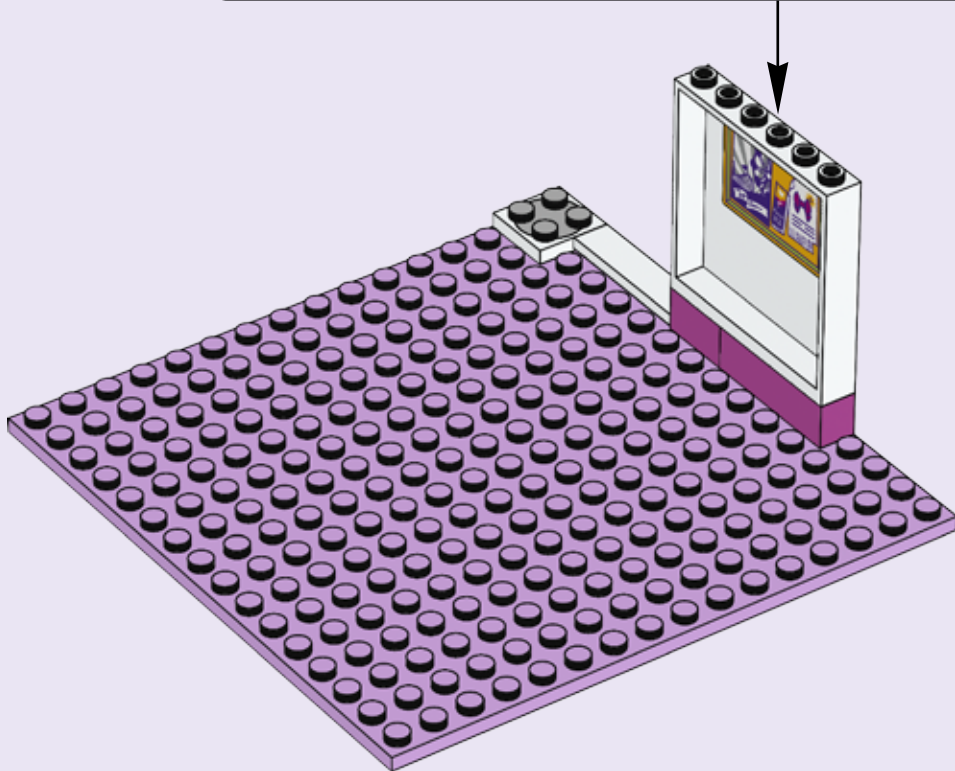 

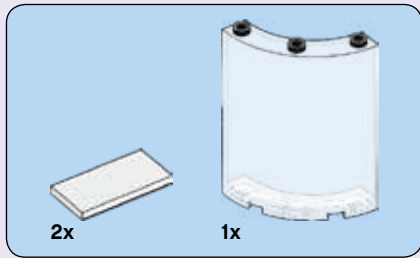 


4

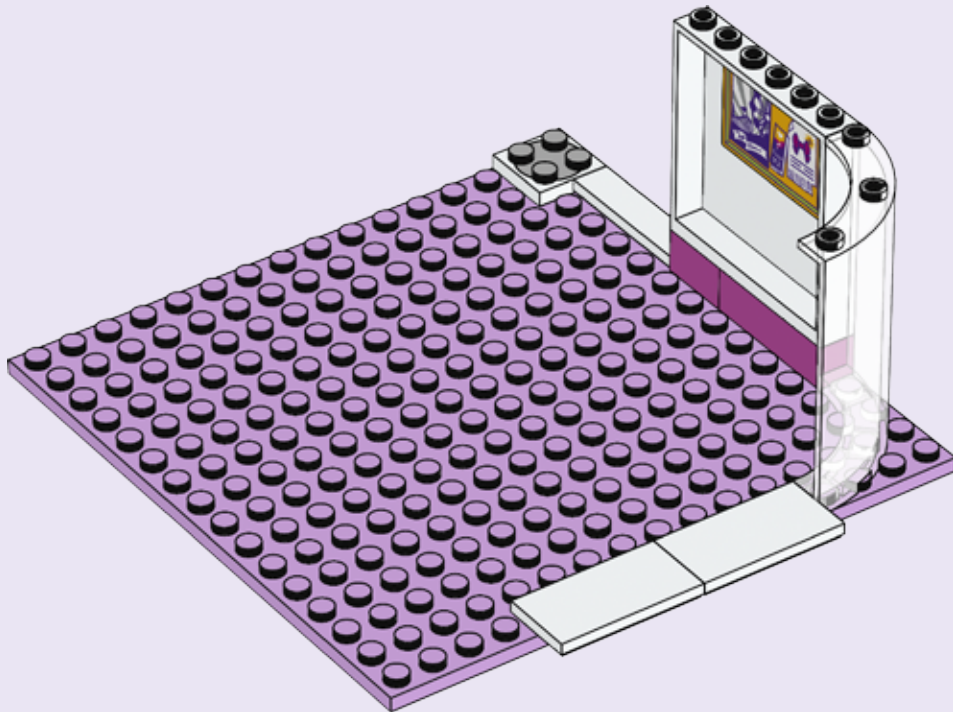 

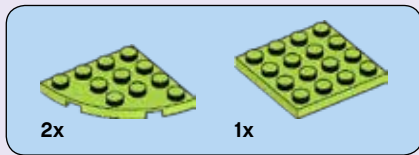 


5

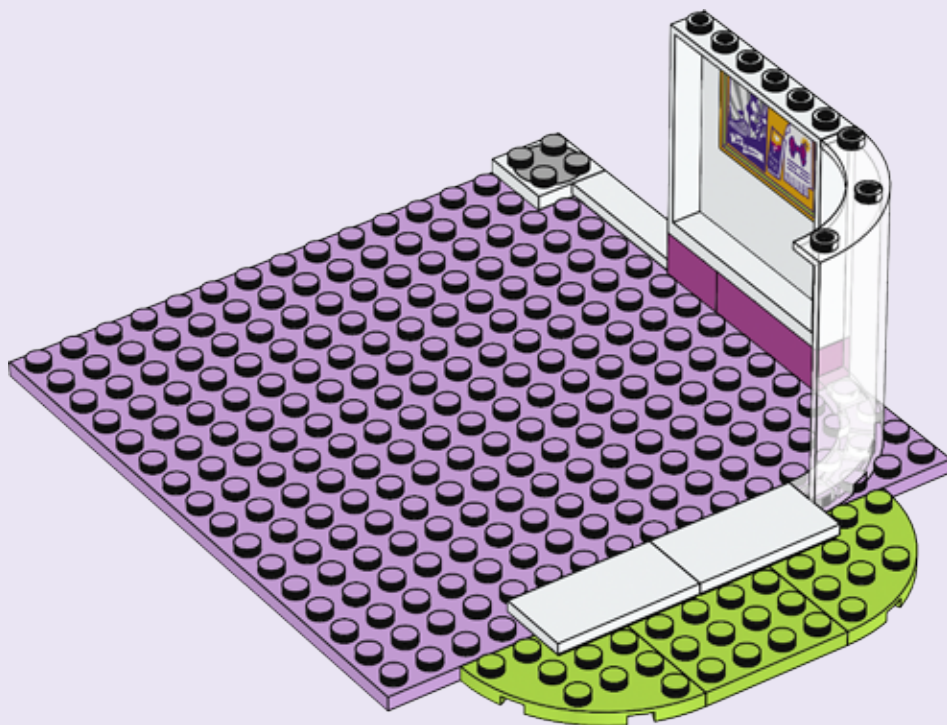 



2x

 6

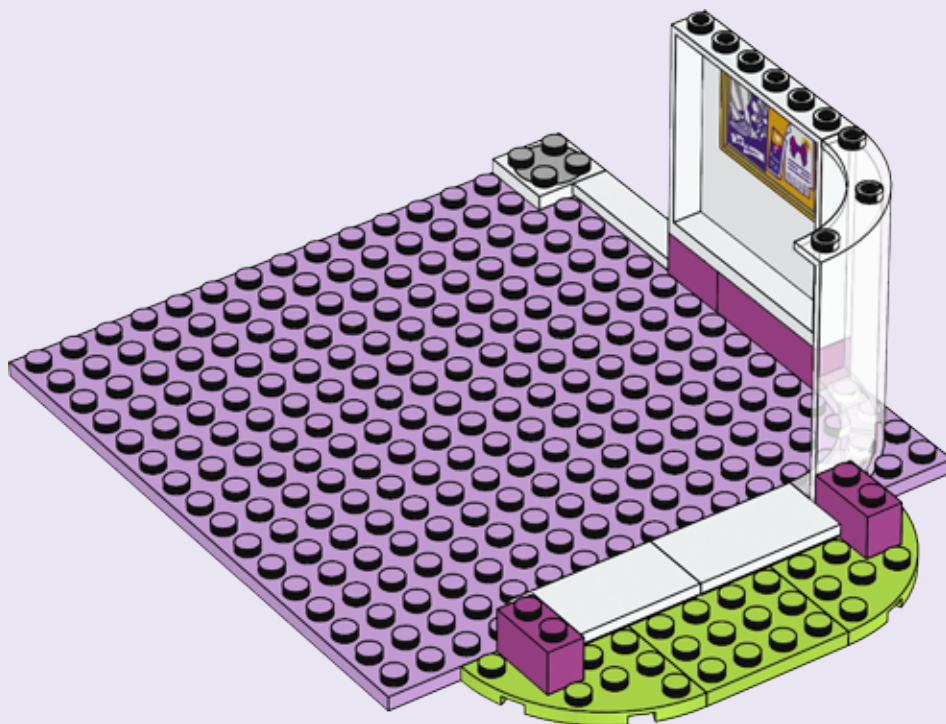






2x





2x

   
7

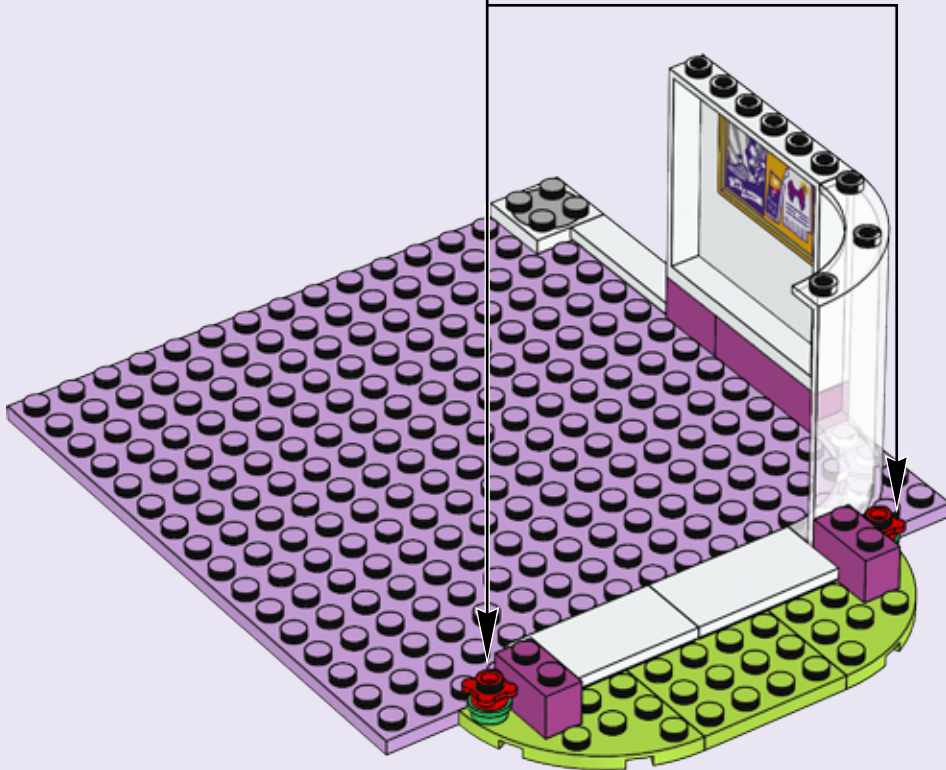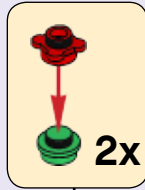


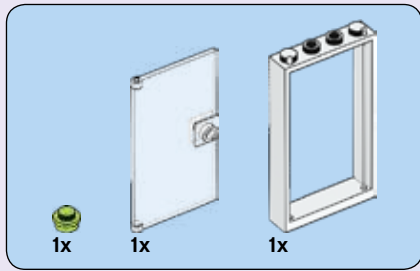



8

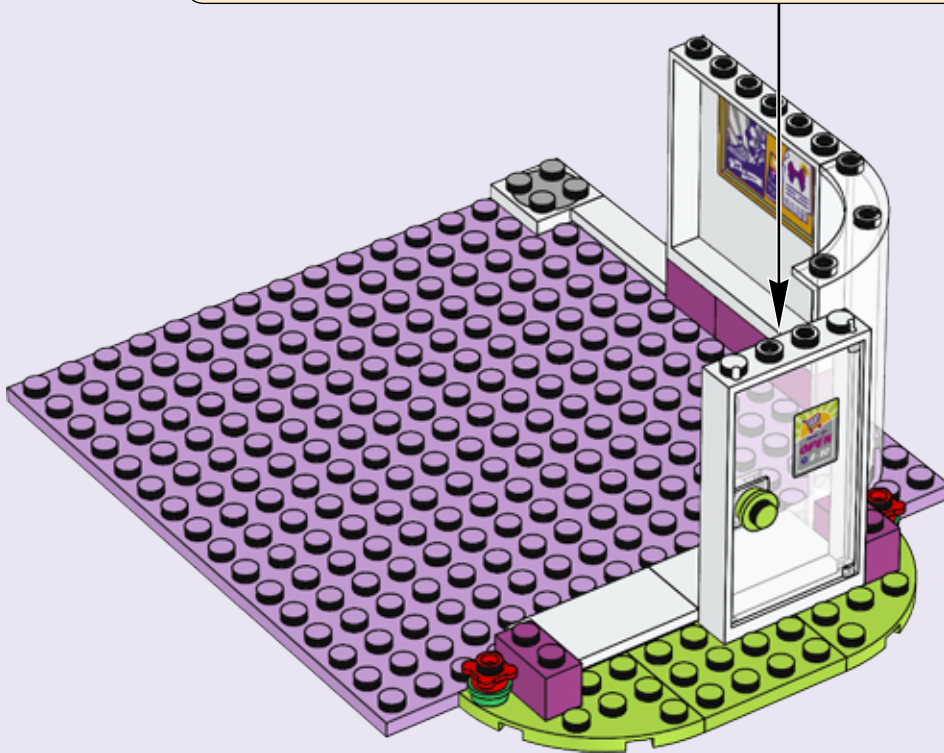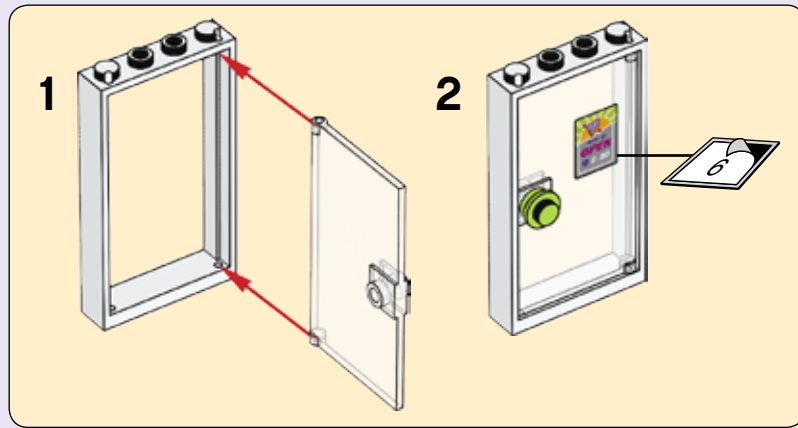  

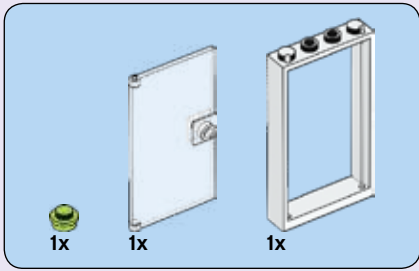 



9

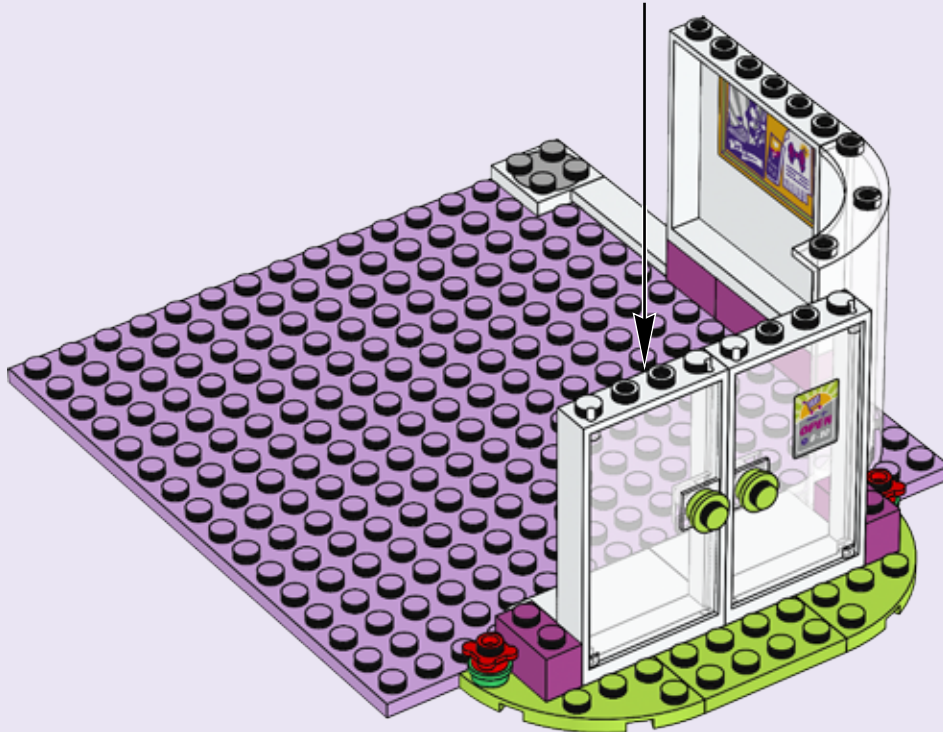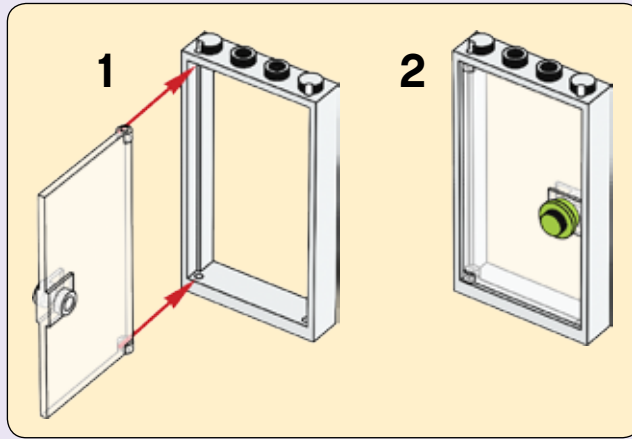  

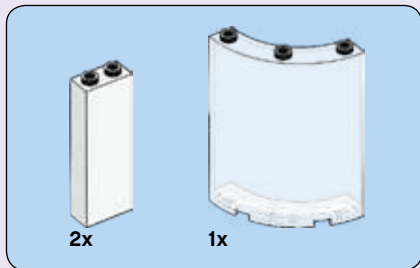 



10

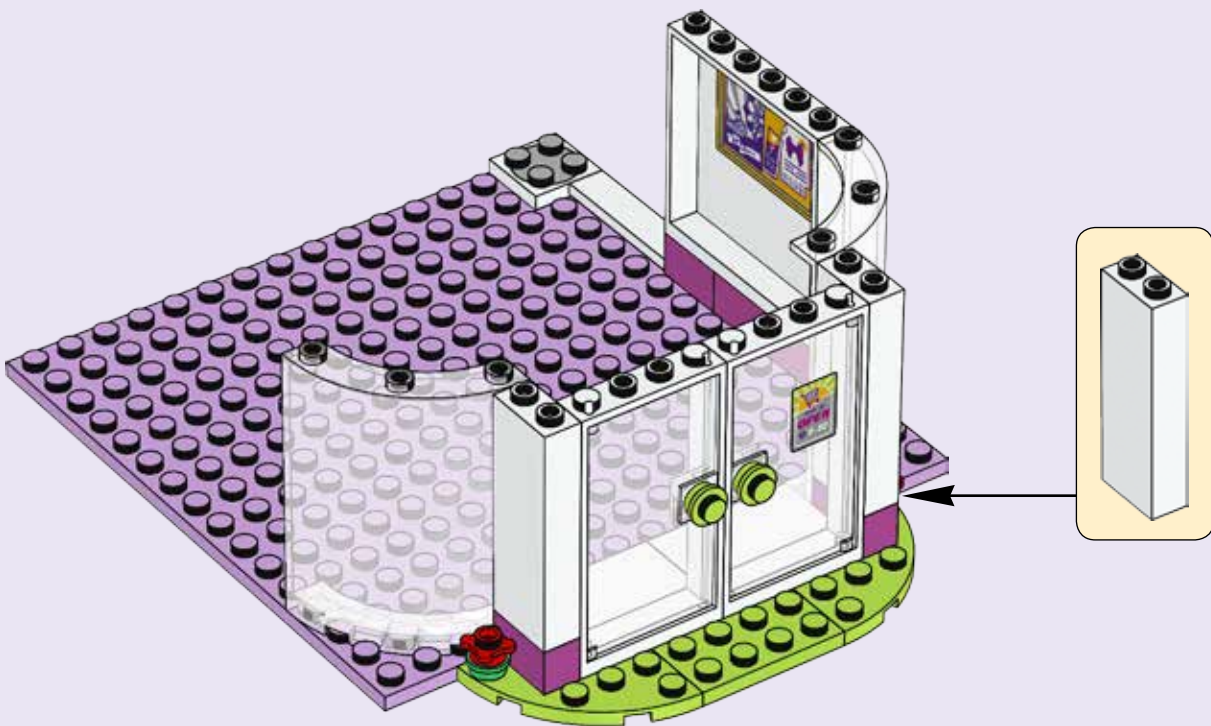 

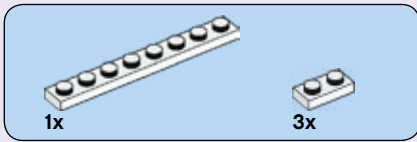 

11

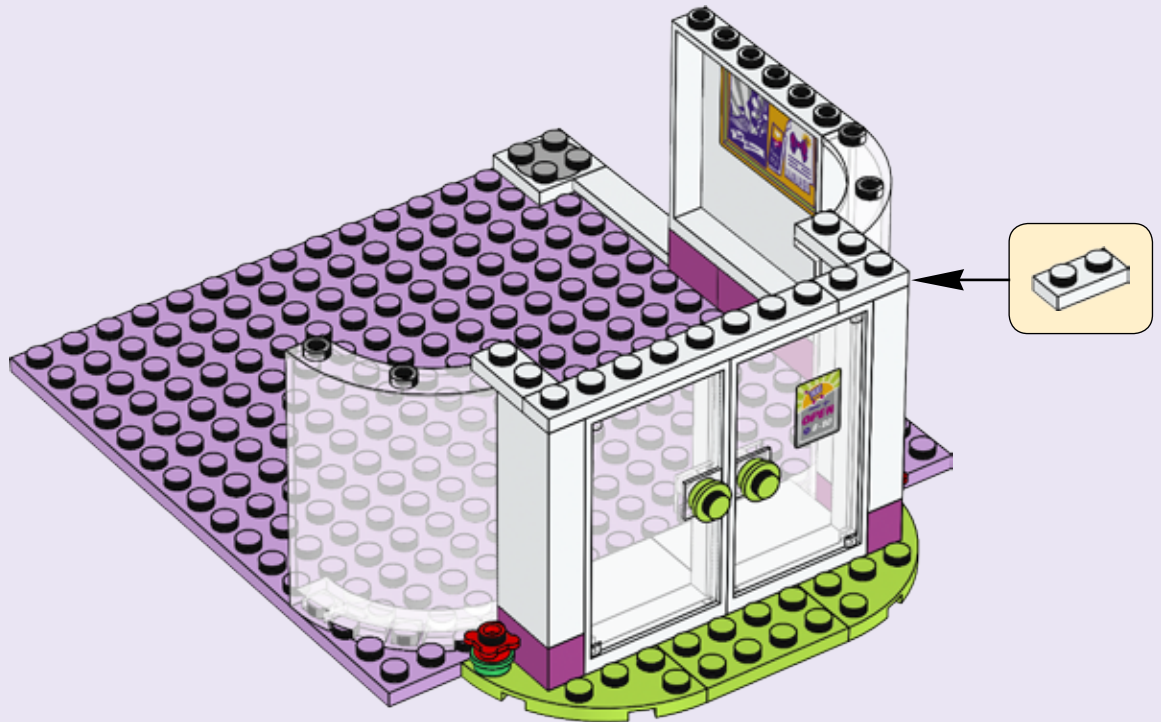 

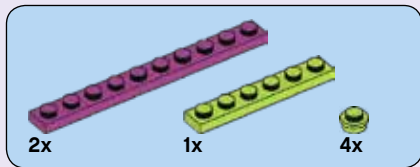 



12






  13

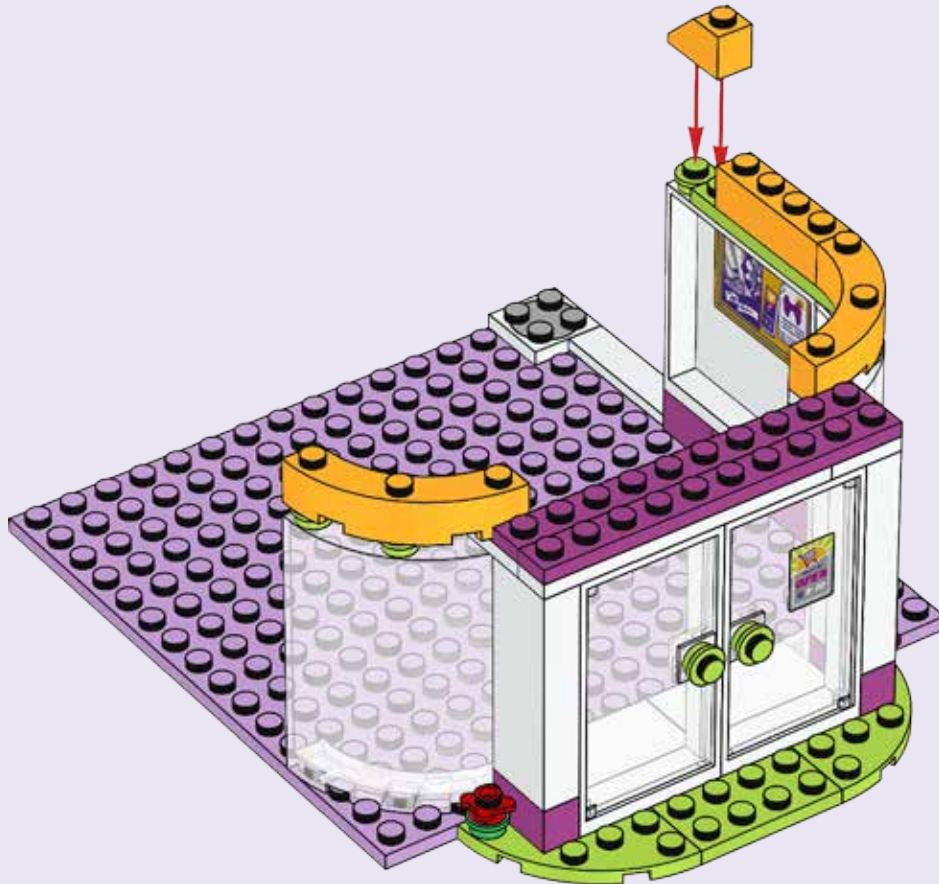

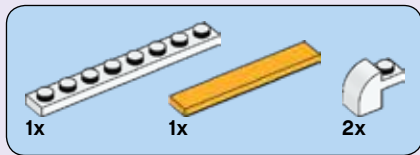

14

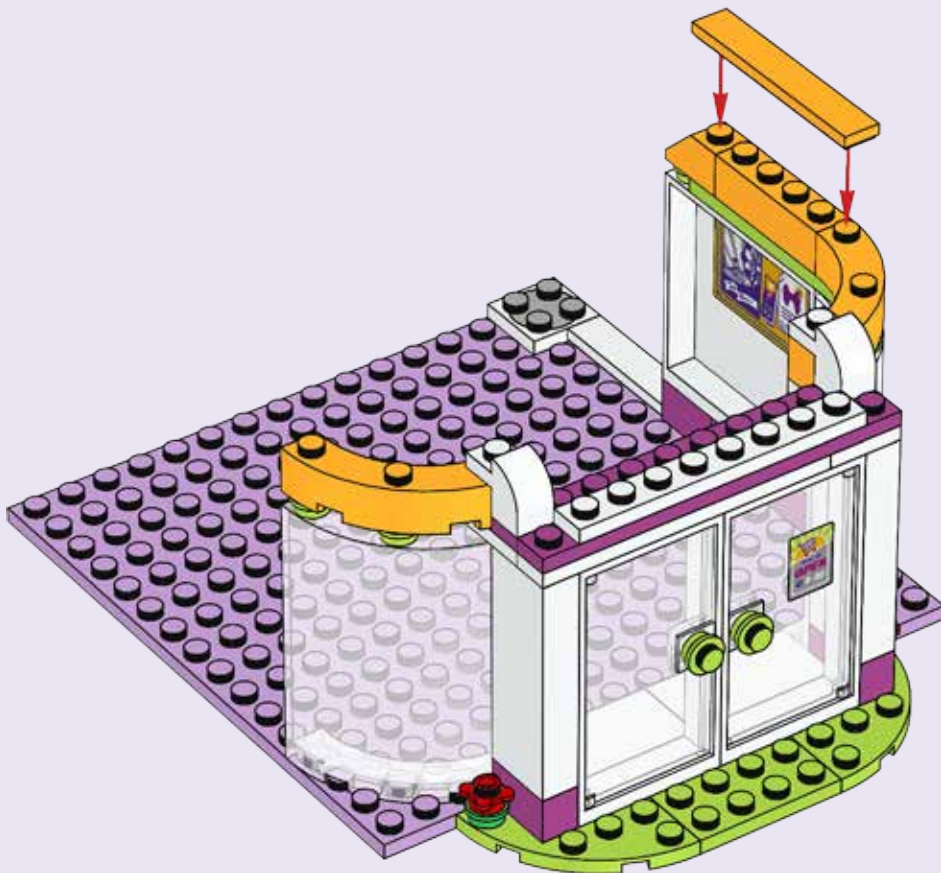 





4x




4x

  
15

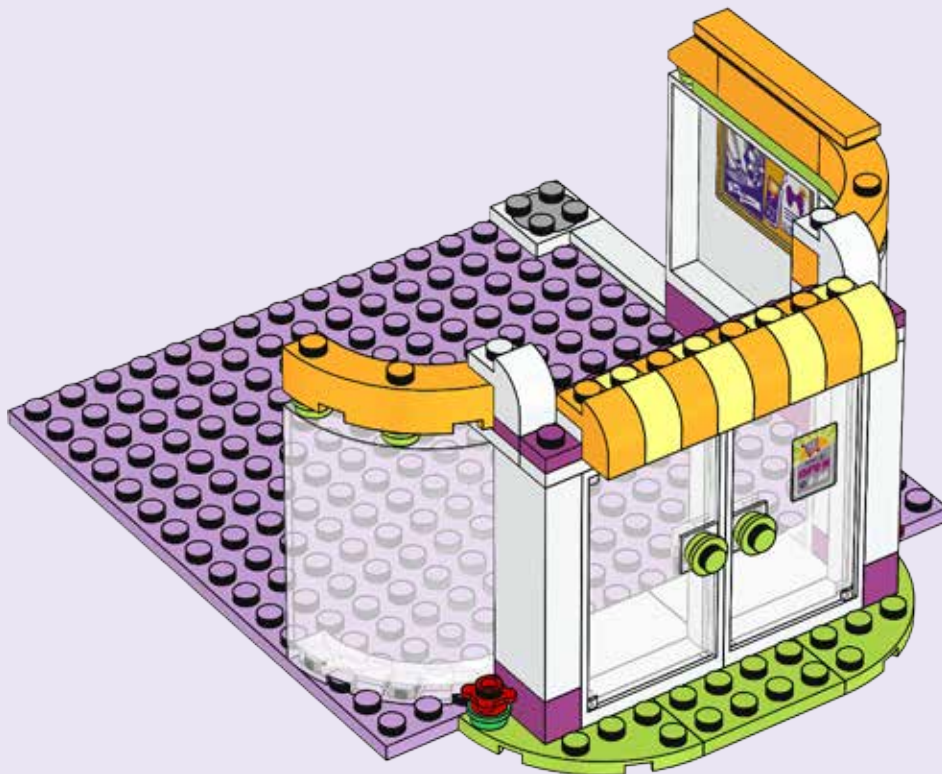


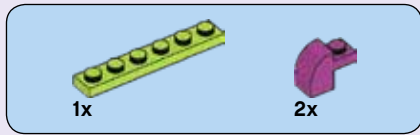


16

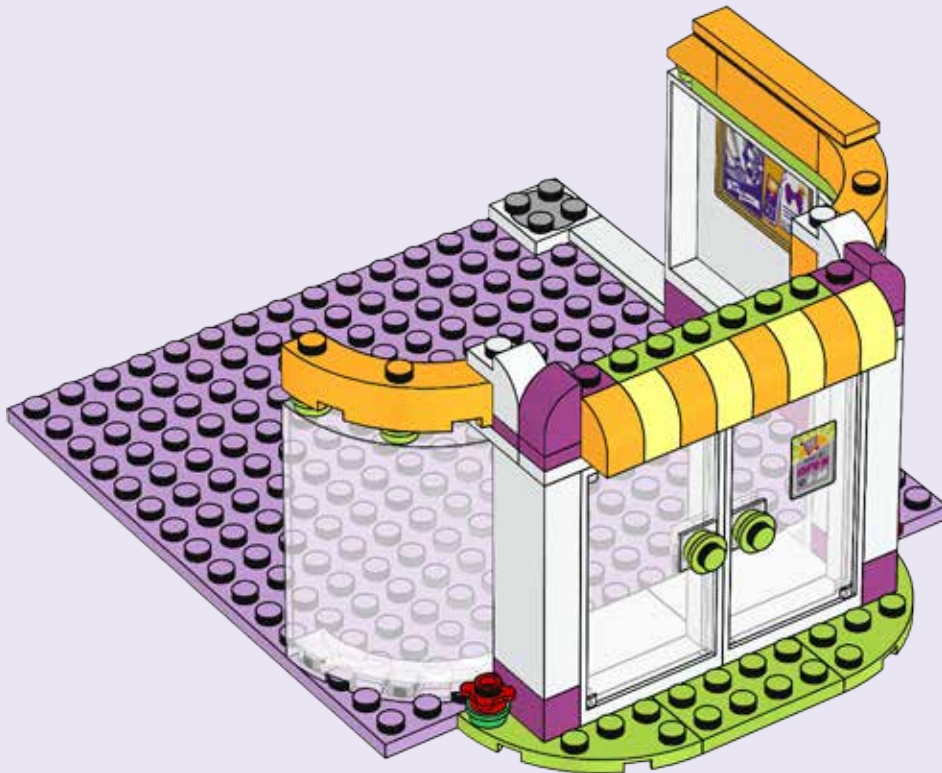 


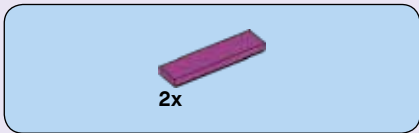 

17

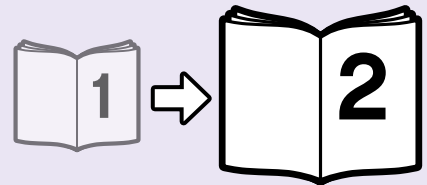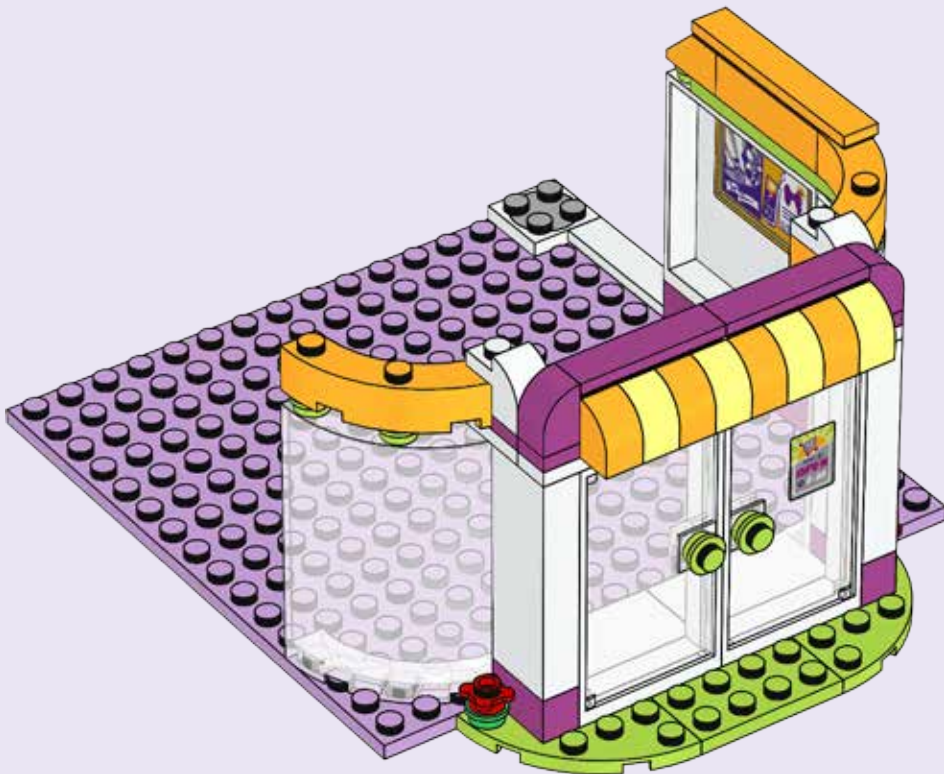  



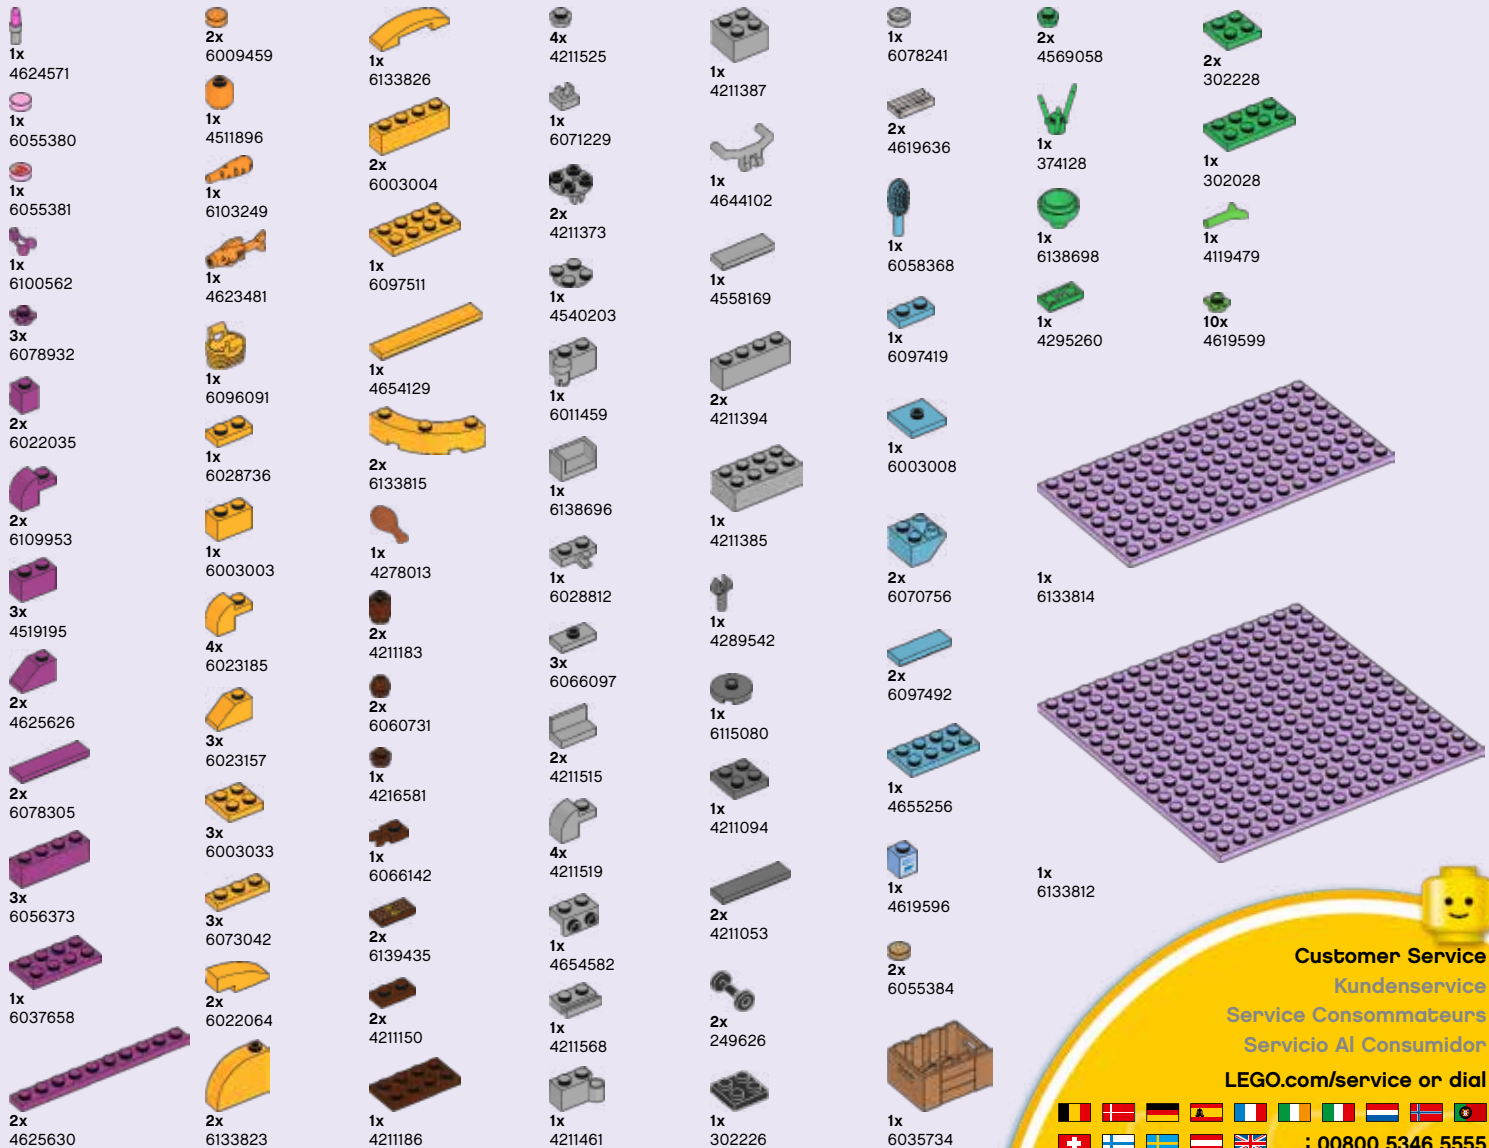 

1x
6133812

1x
6133812

1x
4619596

2x
6055384



1x
6035734

Customer Service
Kundenservice
Service Consommateurs
Servicio Al Consumidor
LEGO.com/service or dial



: 00800 5346 5555

: 1-800-422-5346